BOB Light assembly

BLÅ STATION

Double BOB Light D842

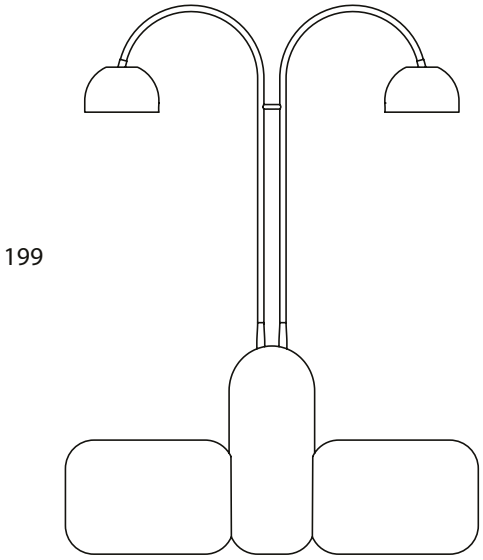

BOB Module Not Included

D842

Important: It is mandatory that any connection to the main electricity supply shall be made by a qualified electrician!

Blå Station AB | Box 100, 2096 22 Åhus, Sweden | Tel: +46 44 249070 | Fax: +46 44 241214
E-mail: info@blastation.se | www.blastation.se

BOB Light assembly

Parts included in Double BOB Light package D842

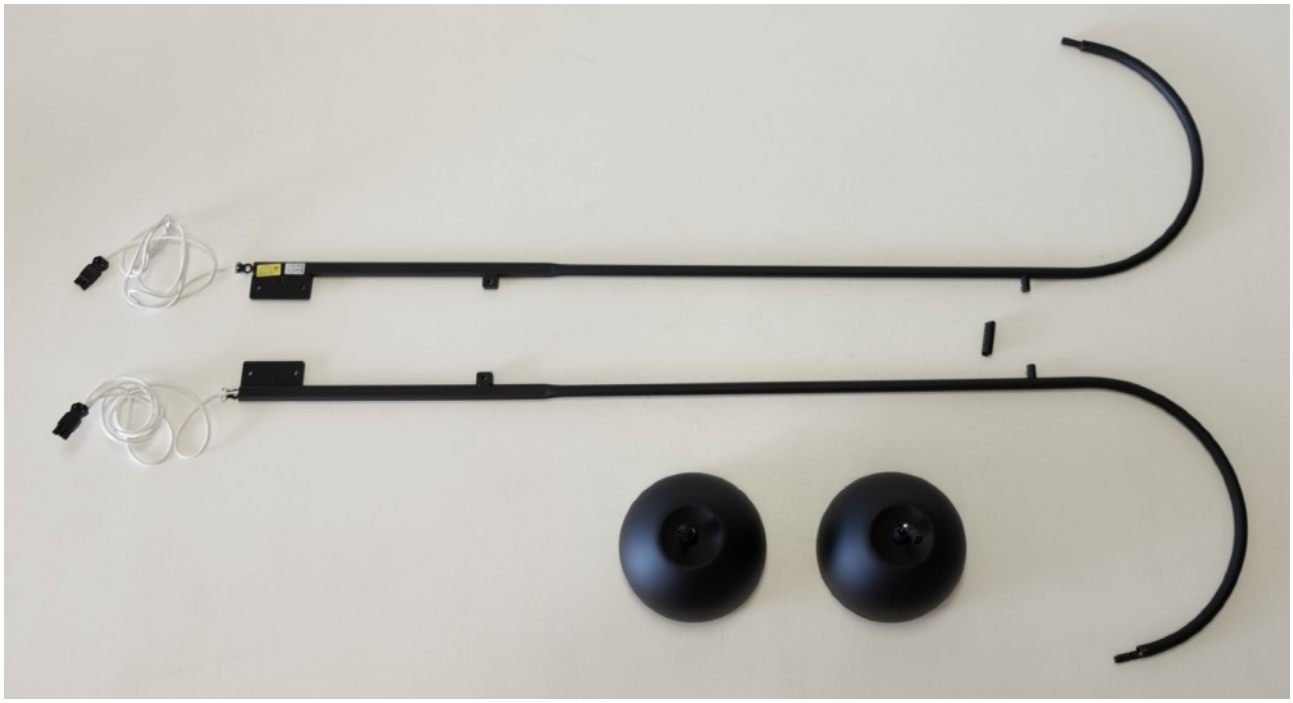

Optional Extension cord 1,5m Wieland/EU socket included if ordered

Blå Station AB | Box 100, 2096 22 Åhus, Sweden | Tel: +46 44 249070 | Fax: +46 44 241214
E-mail: info@blastation.se | www.blastation.se

BOB Light assembly

It is preferable to be at least two persons helping with the assembly. Start by connecting the two BOB Light frames with the included metal bridge and two phillips screws, one for each side.

Blå Station AB | Box 100, 2096 22 Åhus, Sweden | Tel: +46 44 249070 | Fax: +46 44 241214
E-mail: info@blastation.se | www.blastation.se

BOB Light assembly

Loosen the cable tensioner at the lower end of each BOB Light frame with a phillips screwdriver. You might need to turn the frame to access the cable tensioner on the opposite side

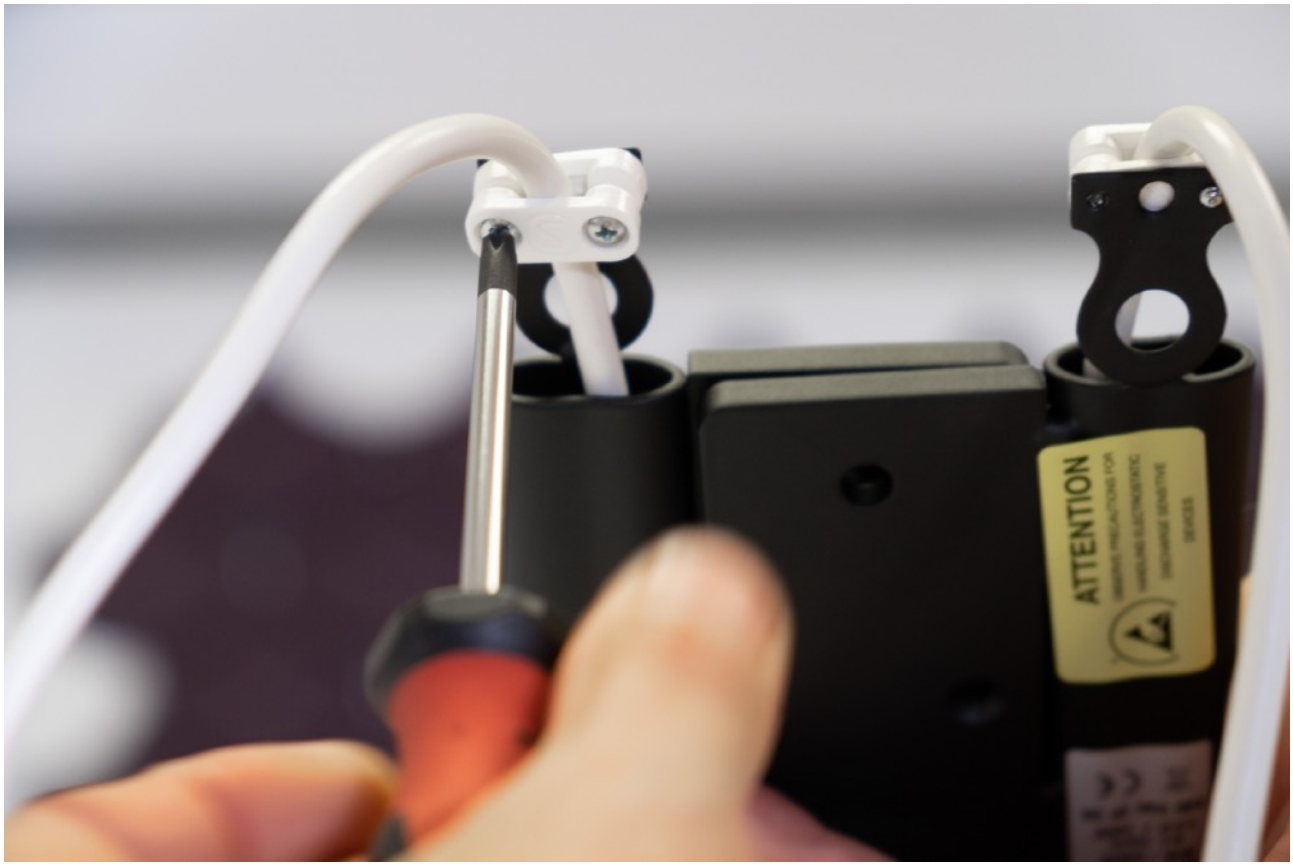

Blå Station AB | Box 100, 2096 22 Åhus, Sweden | Tel: +46 44 249070 | Fax: +46 44 241214
E-mail: info@blastation.se | www.blastation.se

BOB Light assembly

Connect and secure the two BOB Light frames further by screwing two of the included phillips screws through the bottom fittings of both frames, one screw for each side.

Attach the lamp head to the electrical cord by pressing the male and female fittings into place. Notice that the male and female fits only when aligned to match. There should be a "Click" sound when connected correctly.

Blå Station AB | Box 100, 2096 22 Åhus, Sweden | Tel: +46 44 249070 | Fax: +46 44 241214
E-mail: info@blastation.se | www.blastation.se

BOB Light assembly

Attach the lamp head to the lamp frame. First adjust the cord from the cord tensioner at the bottom of the lamp frame. Then at the top there is a notch in the threading and a matching notch in the lamp head. Align the notch and the treading and tighten the thread as much as possible.

Connect the lamp head for the opposite BOB Light in the same way, then tighten each cord tensioner at the bottom of the lamp frames.

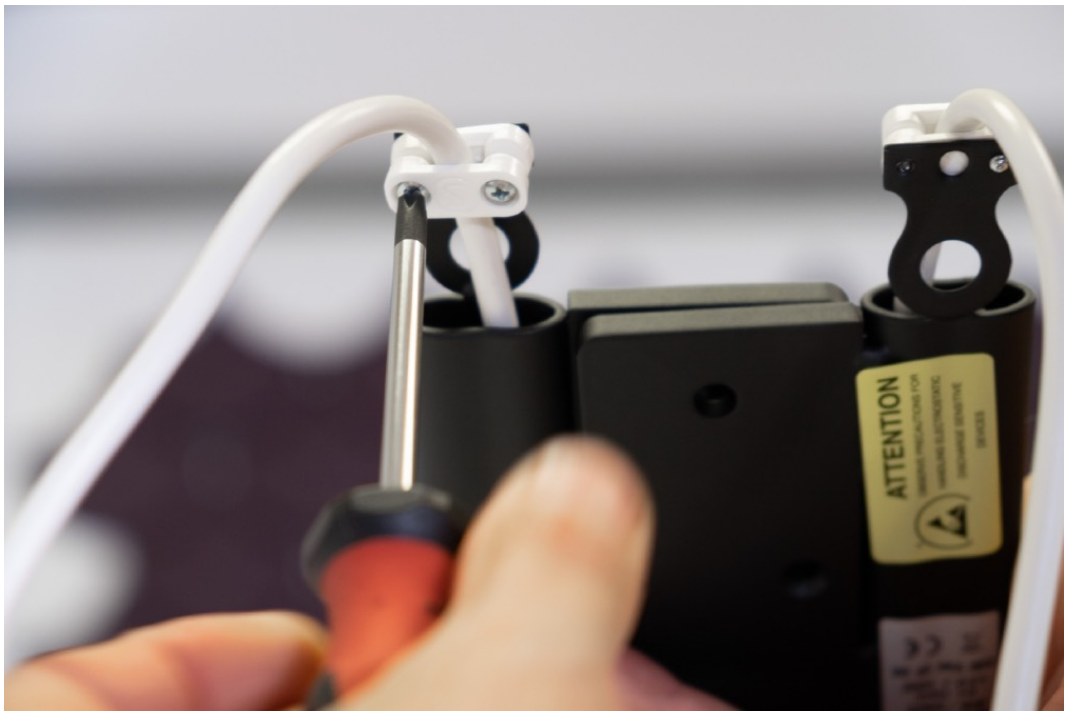

Blå Station AB | Box 100, 2096 22 Åhus, Sweden | Tel: +46 44 249070 | Fax: +46 44 241214
E-mail: info@blastation.se | www.blastation.se

BOB Light assembly

Next step is to attach the BOB Lamp to the BOB Module.
Place the BOB Module so that the metal male fittings in facing you. Align the Bob Light to The BOB Module so that the bottom 2 holes of the BOB Light align with the pre-made holes of the BOB module. The top fitting of the BOB Light should align above the metal male fitting of the BOB Module like the picture below.

Blå Station AB | Box 100, 2096 22 Åhus, Sweden | Tel: +46 44 249070 | Fax: +46 44 241214
E-mail: info@blastation.se | www.blastation.se

BOB Light assembly

Bring the 4 screws that is included and a phillips screwdriver. Screw the 4 screws to place, 2 at the bottom and 2 at the top. No washer needed.

Correctly assembled and attached Double BOB Light to the BOB module. Just continue to build the BOB Sofa with the next module as normal (metal male to plastic female fitting) with the BOB Lamp attached. You have to lift the module with the BOB Light to mount it to the next module.

BOB Sofa main assembly guide can be found here - www.blastation.com/bob-instructions

Blå Station AB | Box 100, 2096 22 Åhus, Sweden | Tel: +46 44 249070 | Fax: +46 44 241214
E-mail: info@blastation.se | www.blastation.se