

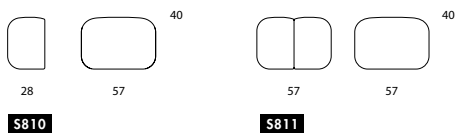
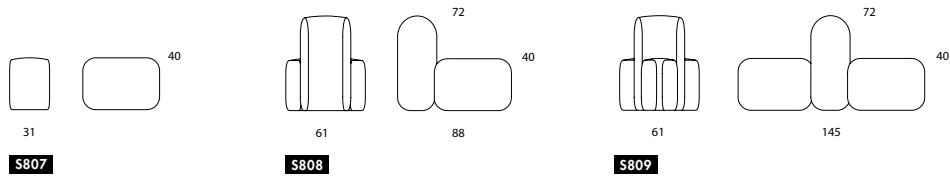
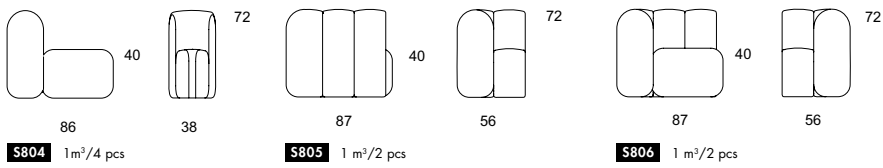


# BOB Manual

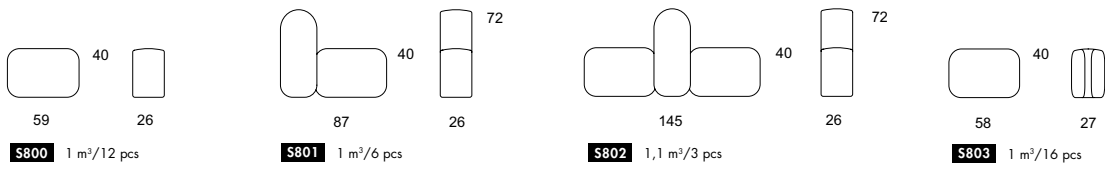


# BOB | Right side plastic female fittings

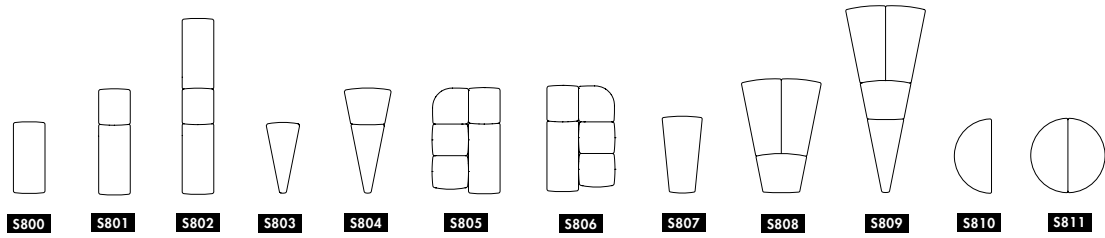

Video: [www.blastation.com/bob-instructions](http://www.blastation.com/bob-instructions)



**BOB | Left side metal male fittings**

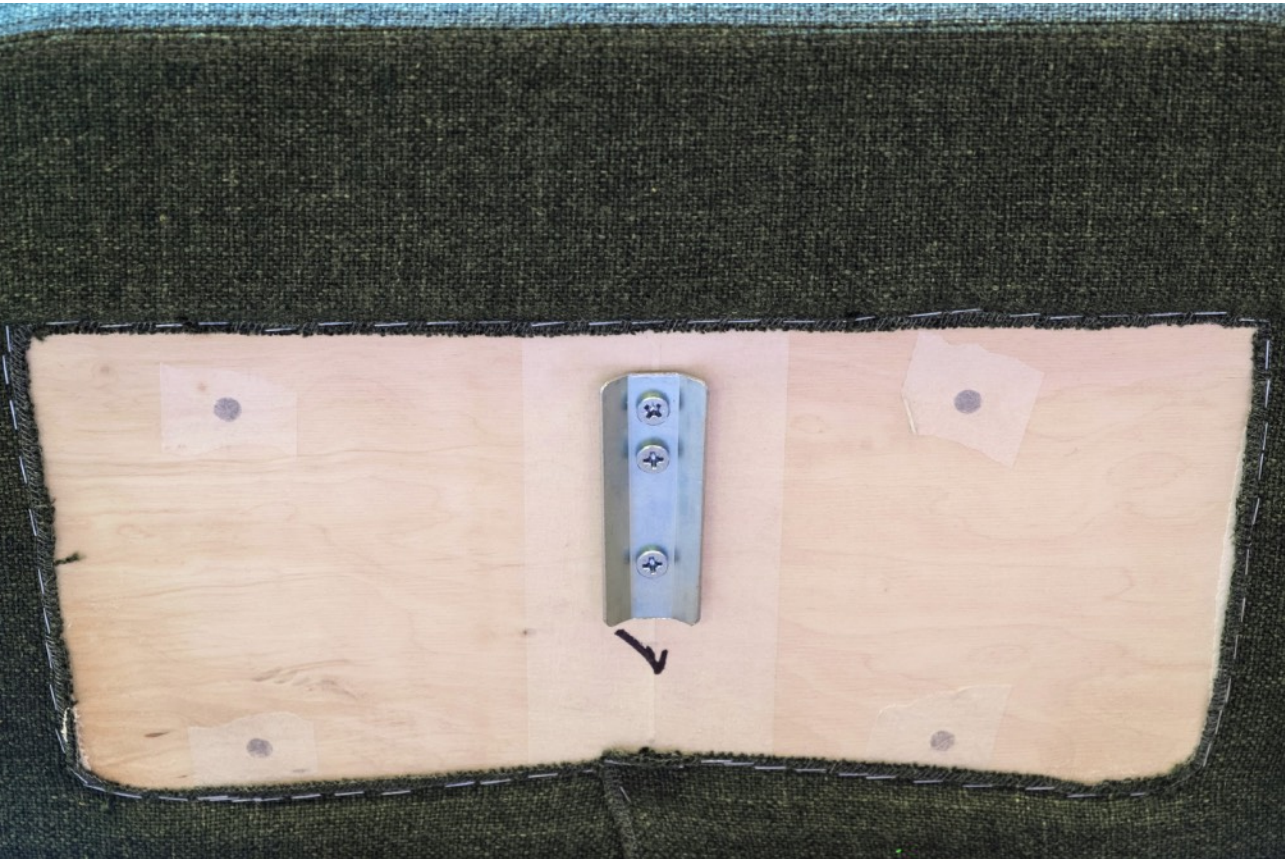

Video: [www.blastation.com/bob-instructions](http://www.blastation.com/bob-instructions)



## BOB | Assemble

- Unpack all the parts.
- Place the parts in the location where the sofa is to be built.
- Plan the assembly and place the parts so that the process becomes smooth.
- Start with the BOB part that is upholstered on the left side and with the plastic female fitting placed on the right side. Please Notice! Right and Left are based on if you are sitting in the BOB sofa.
- Lift the next part with the steel male fitting mounted on the left side, it is supposed to slide down into the female plastic fitting on the opposite module.
- Make sure the parts are in line with each other - front and back - and level.
- Press the parts against each other (you may need some help to hold the first part steady).
- Let the part slide down into all the fittings simultaneously.
- Check if all fittings are joined - before pushing down the part in the bottom.
- **Press down the part with force.**
- Press the fittings in the bottom by - **sit on the seat with force - sit on the back - sit on the seat again.** Make sure the parts are level.
- Make sure the parts are level and do not tilt right or left.
- Now it's time for the next section.



**Assembled correctly - level sofa**



**Assembled incorrectly - screw sofa**



## BOB | Disassemble

- Use a board that is approximately 5cm thick (or more).
- Put the board under the part assembled last (often the end piece with fabric on the right side or S805 - Armrest Right End) and push firmly on the module next to it for it to come loose.
- Alternatively use two crowbars and place them under the wooden frame under each fitting on the part assembled last. Be sure to place the crowbars under the solid wooden frame so they do not damage the fabric. Alternate the pressure applied on the crowbars for the part to come loose.
- Bring the disassembled module up from the fittings to be completely disconnected.



# Instruction video

[www.blastation.com/bob-instructions](http://www.blastation.com/bob-instructions)

